

PORCH

Protects the entrance and creates space

The porch gives a dry entry into the tent and provides a place for shoes and other items. It is possible to open the porch completely which offers a rain-protected area with a 180-degree view. Can easily be removed without taking down the tent, for example if there is a risk of bad weather.



Porches







Absid

The porch gives a dry entry into the tent and provides storage. Open to ventilate via the mosquito net fitted door or the mosquito net fitted side wall. It is possible to open the porch completely, which offers a rain-protected area with a 180-degree view. The porch is not intended to resist strong winds and snow. The exceptional storm resistance of a Tentipi® Nordic tipi is maintained by the porch being designed so that it can easily be removed in bad weather.

Material

Pro cp – beige, strong and water-repellent cotton/polyester fabric. The fabric is denser and more resistant to sunlight as regards strength and colour fastness than all corresponding fabrics tested. It has also better form stability and water repellency properties. The porch has a reinforcement at the bottom for better wear resistance.

Comfort cp – beige, strong and water-repellent cotton/polyester fabric. The porch has a reinforcement at the bottom for better wear resistance.











Porch	Pro cp		Comfort cp	
Size	7	9	7	9
Recommended for tent model	Safir 7 cp	Safir 9 cp	Zrikon/Onyx 7 cp	Zrikon/Onyx 9 cp
Weight (kg)	6.5	6.8	6.3	6.6
Length along ground (cm)	140		140	
Width (cm)	175	210	175	210
Height (cm)	180	175	180	175
Size when packed (cm)	53x31x23	61x33x25	53x31x23	61x33x25
Article number	10702	10902	10703	10903







Accessory connector

As of 2012, all Safir and Zirkon Nordic tipis of sizes 5-9 have a patented accessory sleeve (an integrated holder for accessories, placed over the door). There is a separate accessory connector available for earlier models, for Onyx and for tent size 15. Find the right accessory connector for your Nordic tipi at tentipi.com

